

USER TIPS



1 SPIN-ON
2 SCREWS
3 FLANGE
4 GASKET
5 BASKET

6 GASKET









WARNING

Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

DISPOSAL OF FILTER ELEMENT

The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

INSTALLATION

- 1. The air breather filters are mounted on the tank in a threaded seat (no burrs, sharped edges or dirt is admitted on the seat).
- 2. Put the first gasket (6) on the tank keeping the holes aligned.
- 3. Insert the basket (5) in the tank hole keeping the holes aligned.
- 4. Put the second gasket (4) between the basket and the flange (3).
- 5. Place the flange (3) on the second gasket kee ping the holes aligned.
- 6. Secure the components to the tank with the screws (2).
- Screw the spin-on (1) on the flange male thread (3) until it is locked.

MAINTENANCE

- 1. Before removing the spin-on (1), ensure that the system is switched off and there is no residual pressure in the system.
 - 2. Unscrew the spin-on (1).
 - 3. Screw the new spin-on following installation instruction.