

FT6 & FT7 SERIES

Air breather filters



USER TIPS



1 MALE THREAD

WARNING

- ⚠ Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.

DISPOSAL OF FILTER ELEMENT

- ⚠ The used filter elements and the filter parts dirty of oil are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.

INSTALLATION

1. The air breather filters are mounted on the tank in a threaded seat (no burrs, sharp edges or dirt is admitted on the seat).
2. Add some lubricant on the male thread (1) and tighten until stop.
3. Refer to the tank manufacturer specifications for tighten torque.

MAINTENANCE

- ⚠
 1. Before removing the filler breather, ensure that the system is switched off and there is no residual pressure in the system.
 2. Remove the filler breather.
 3. Fit the new filler breather following installation instruction.