




FA5 SERIES

In line medium pressure filters

Inline filters with spin-on cartridge for operating pressure up to 24 bar, flow rate up to 250 l/min.

The indicator ports allow to fit a visual electrical differential indicator and an absolute clock manometer or pressure switch.

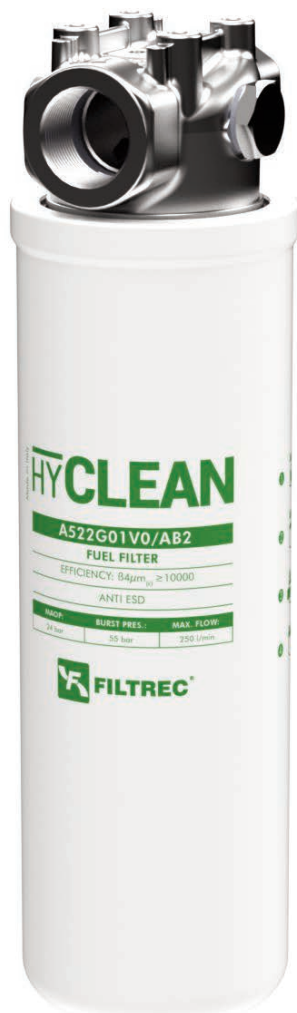

HOUSING

tested according to NFPA T3.10.17, ISO12829, ISO3968

PRESSURE: Max operating: 24 bar
Burst: 55 bar

CONNECTION: G 1 1/4"

MATERIALS: Head: aluminium alloy
Bowl: painted steel
Seal: FKM

BYPASS VALVE: No by-pass

ELEMENT

tested according to ISO 11170, 2941, 2942, 2943, 3724, 3968, 16889, 16908, 23181


FILTER MEDIA: Inorganic microfiber:
G01 - G03 - G06 - G10 - G25
Inorganic microfiber + water absorbent:
GW40

COLLAPSE PRESSURE: 12 bar



TEMPERATURE RANGE: from -25 °C to +120 °C

FLUID COMPATIBILITY: Full with HH-HL-HM-HV
HETG-HEES (acc. to ISO 6743/4).
Diesel EN590, ASTM D975
Biodiesel B0 to B100 EN14214
Fuel oil EN51603-1
For use with other fluid please
contact Filtrac Customer Service
(info@filtrac.it).

OVERALL DIMENSIONS

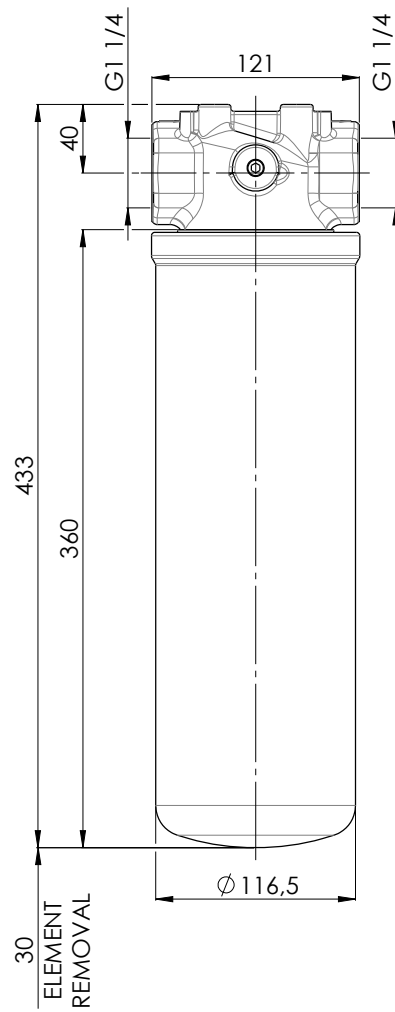

Weight: 3,9Kg

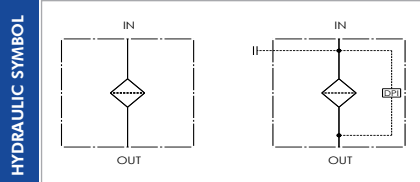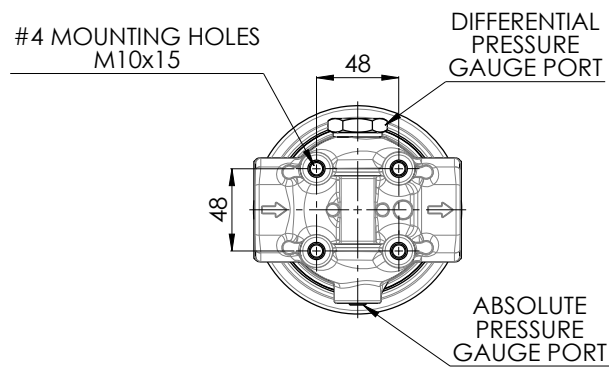

ORDERING INFORMATION

	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.	13.
	FA5	22	G01	V	0	AB2	B6	0	Z	000	S	0	
SPARE ELEMENT	A5	22	G01	V	0	/AB2							

1. FILTER SERIES	FA5		
2. FILTER ELEMENT SERIES	A5		
3. FILTER SIZE	22		
4. FILTER MEDIA		/AB2	/AB1
	000	no element	
	G01	glassfiber $\beta_{4\mu\text{m(c)}} > 10.000$	glassfiber $\beta_{4\mu\text{m(c)}} > 2.000$
	G03	glassfiber $\beta_{5\mu\text{m(c)}} > 5.000$	glassfiber $\beta_{4\mu\text{m(c)}} > 2.000$
	G06	glassfiber $\beta_{7\mu\text{m(c)}} > 2.000$	
	G10	glassfiber $\beta_{10\mu\text{m(c)}} > 2.000$	glassfiber $\beta_{12\mu\text{m(c)}} > 1.000$
	G25	glassfiber $\beta_{25\mu\text{m(c)}} > 2.000$	
	GW40	glassfiber $\beta_{35\mu\text{m(c)}} > 1.000$ + water absorbent	
5. SEALS	V	FKM	
6. BYPASS VALVE	0	no by-pass	
inbuilt into the filter element			
7. ELEMENT SUFFIX	AB1	AbsoluteBeta - high capacity / efficiency filter element with AB1 connection	
only for spare element "/" before the three digit suffix is needed	AB2	AbsoluteBeta 2 - very high capacity / efficiency filter element with AB2 connection	
8. CONNECTIONS	B6	G 1 1/4"	
9. BYPASS VALVE	0	no by-pass	
inbuilt into the filter head			
10. INDICATOR PORT OPTION	0	no indicator port	
	Z	ports for absolute pressure gauge and differential clogging indicator both plugged with metal plug	
11. COMPULSORY FIELD	000	Filtrec standard	
12. CORROSION PROTECTION	S	standard (Filter head with no treatment)	
13. OPTIONS	0	AB2 thread	
	3	AB1 thread	

ACCESSORIES

The accessories must be ordered separately


INDICATOR	MP0	pressure gauge rear connection, scale 0-16 bar
(Y and F) digit for FKM seal option For other options see clogging indicators catalogue	MPC	pressure gauge rear connection, setting 3 bar, scale 0-10 bar
	MRC	pressure gauge radial connection, setting 3 bar, scale 0-10 bar
	EY2	differential electric 2,7 bar
	VY2	differential visual 2,7 bar
	VEXF2	differential visual electric 2,7 bar
	PF1	metal plug for indicator seat - FKM

PRESSURE DROP (Δp) INFORMATION FOR FILTER SIZING

The total Delta P through a filter assembly is given from Housing Δp + Element Δp ; this ideally should not exceed 1,0 bar. N.B. All the reported data have been obtained at our laboratory, according to specification ISO3968 with mineral oil having 32 cSt viscosity and density 0,875 Kg/dm³.

HOUSING PRESSURE DROP

The housing Δp is given by the curve of the considered model and port, in correspondence of the flow rate value.

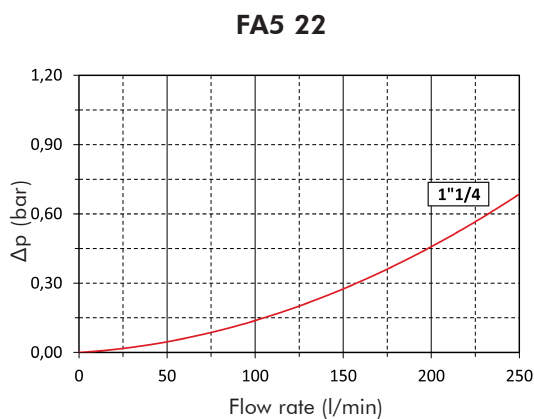

ELEMENT PRESSURE DROP

The element Δp (bar) is given by the flow rate (l/min) multiplied by the factor in the table here below corresponding to the selected media and divided by 1000. If the oil has a viscosity V_x different than 32 cSt a corrective factor $V_x/32$ must be applied.

Example: 100 l/min with A522G01V0/AB2 and oil viscosity 46 cSt $> 100 \times 5,8/1000 \times 46/32 = 0,83$ bar

		G01	G03	G06	G10	G25	GW40
A522	AB2	5,80	3,29	1,08	0,83	0,65	0,98
	AB1	3,29	1,35		0,73		

EXAMPLE OF TOTAL Δp CALCULATION

FA522G01V0AB2B60Z000S0 with 100 l/min and oil 46 cSt

Housing Δp 0,14 bar + element Δp 0,83 bar ($100 \times 5,8/1000 \times 46/32$) = total assembly Δp 0,97 bar

USER TIPS



- 1 FILTER HEAD
- 2 INDICATOR PORT
- 3 FIXING HOLES
- 4 FILTER CARTRIDGE
- 5 SEAL KIT

CARTRIDGE TIGHTENING TORQUE

All models	1/2 turn
------------	----------


INDICATOR TIGHTENING TORQUE

Differential	50 Nm
Absolute	10 Nm


SPARE SEAL KIT (5)

	FKM
FA5-2x	06.021.00411



WARNING

-  Make sure that Personal Protective Equipment (PPE) is worn during installation and maintenance operation.


DISPOSAL OF FILTER ELEMENT

-  The used filter elements and the filter parts dirty of oil or fuel are classified as "Dangerous waste material": they must be disposed according to the local laws by authorized Companies.



INSTALLATION

-  1. The IN and OUT ports must be connected to the hoses in the correct flow direction an arrow shows on the filter head (1).
- 2. The filter housing should be preferably mounted with the cartridge (4) downward.
- 3. Secure to the frame the filter head (1) using the threaded fixing holes (3).
- 4. Verify that no tension is present on the filter after mounting.
- 5. Enough space must be available for filter element cartridge replacement.
- 6. The visual clogging indicator must be in a easily viewable position.
- 7. When a electrical indicator is used, make sure that it is properly wired.
-  8. Never run the system with no filter element fitted.
- 9. Keep in stock a spare FILTREC filter element for timely replacement when required.
- 10. Filter housing should be earthed.

OPERATION

-  1. The filter must work within the operating conditions of pressure, temperature and compatibility given in the first page of this data sheet.
- 2. The filter element must be replaced as soon as the clogging indicator signals at working temperature (in cold start conditions, fluid temperature lower than 30°C, a false alarm can be given due to oil viscosity).
- 3. If no clogging indicator is mounted, replace the element according to the system manufacturer's recommendations.

MAINTENANCE

-  1. Make sure that the system is switched off and there is no residual pressure in the filter.
- 2. Unscrew the filter cartridge (4) by turning it anti-clockwise and remove it. Check the condition of the gasket located at the end of the threaded spigot; replace it if necessary.
- 3. Fit a new FILTREC cartridge element (4), verifying the part number, particularly concerning the micron rating.
- 4. Ensure that the head mounting face is clean.
-  5. Lubricate the gasket of the replacement cartridge and the thread prior to assembly.
- 6. Spin on the new cartridge until it reaches the mounting face and tighten for 1/2 turn.

